


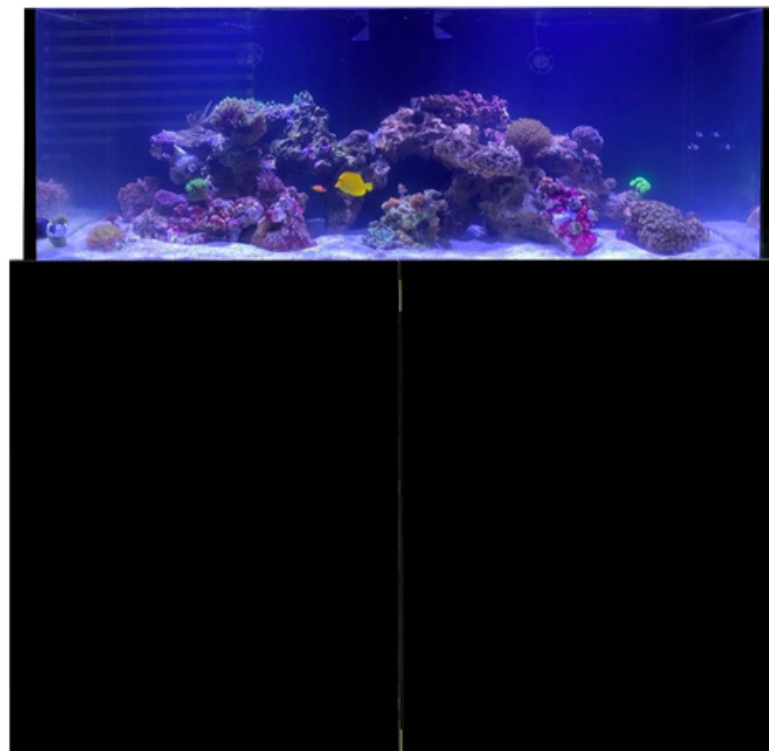

DIAMOND LINE

INSTALLATION MANUAL  
PIPEWORK MODEL 535 & XL




# Overview piping







You will receive the piping pre-glued in 2 parts. On the left the main drain with an integrated return pipe. The emergency drain is on the right. In the supplied bag you will find the outlet and a hose clamp to attach the hose for the pump.

# Connecting the drains

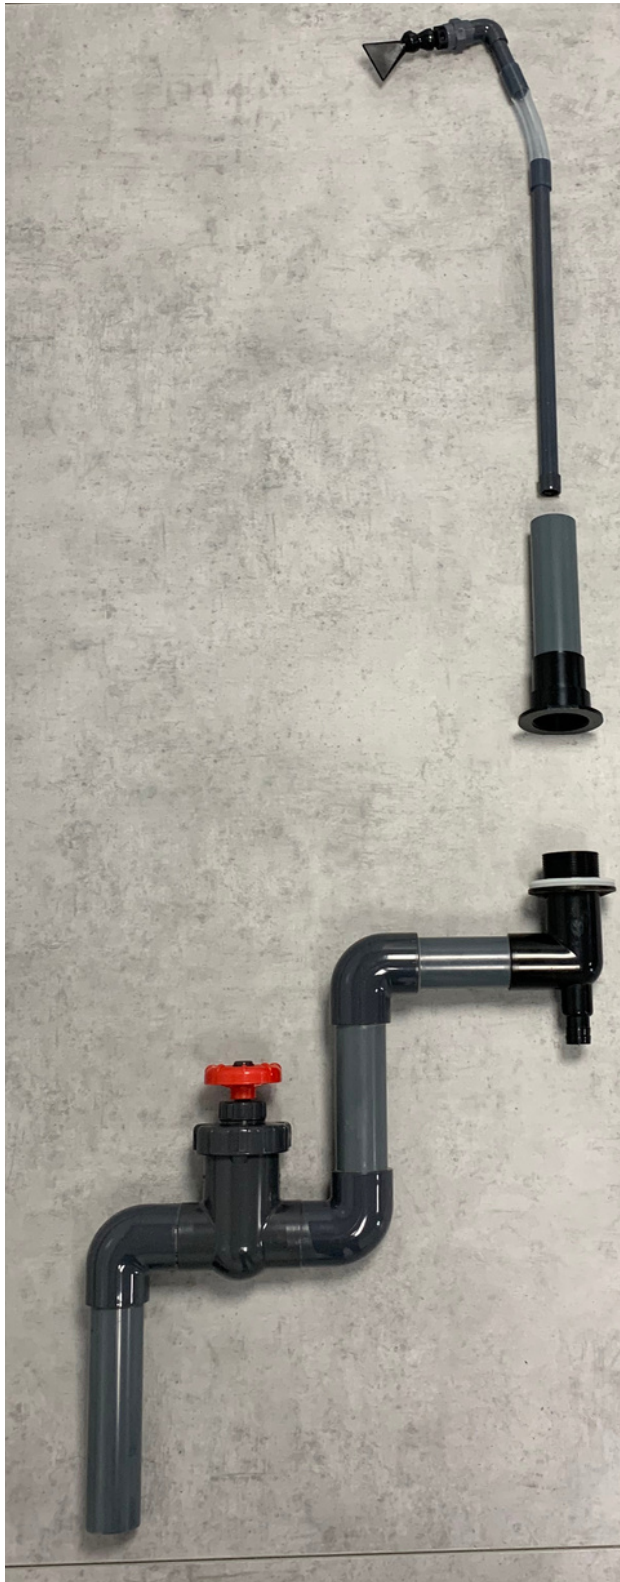

To start connecting, unscrew both the main drain and the emergency drain. The main drain must be attached to the pre-drilled hole on the left side of the overflow. The emergency drain is attached to the hole on the right side of the overflow. Note: do not overtighten the pipes to prevent glass breakage

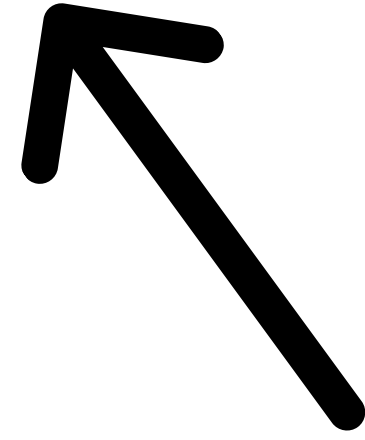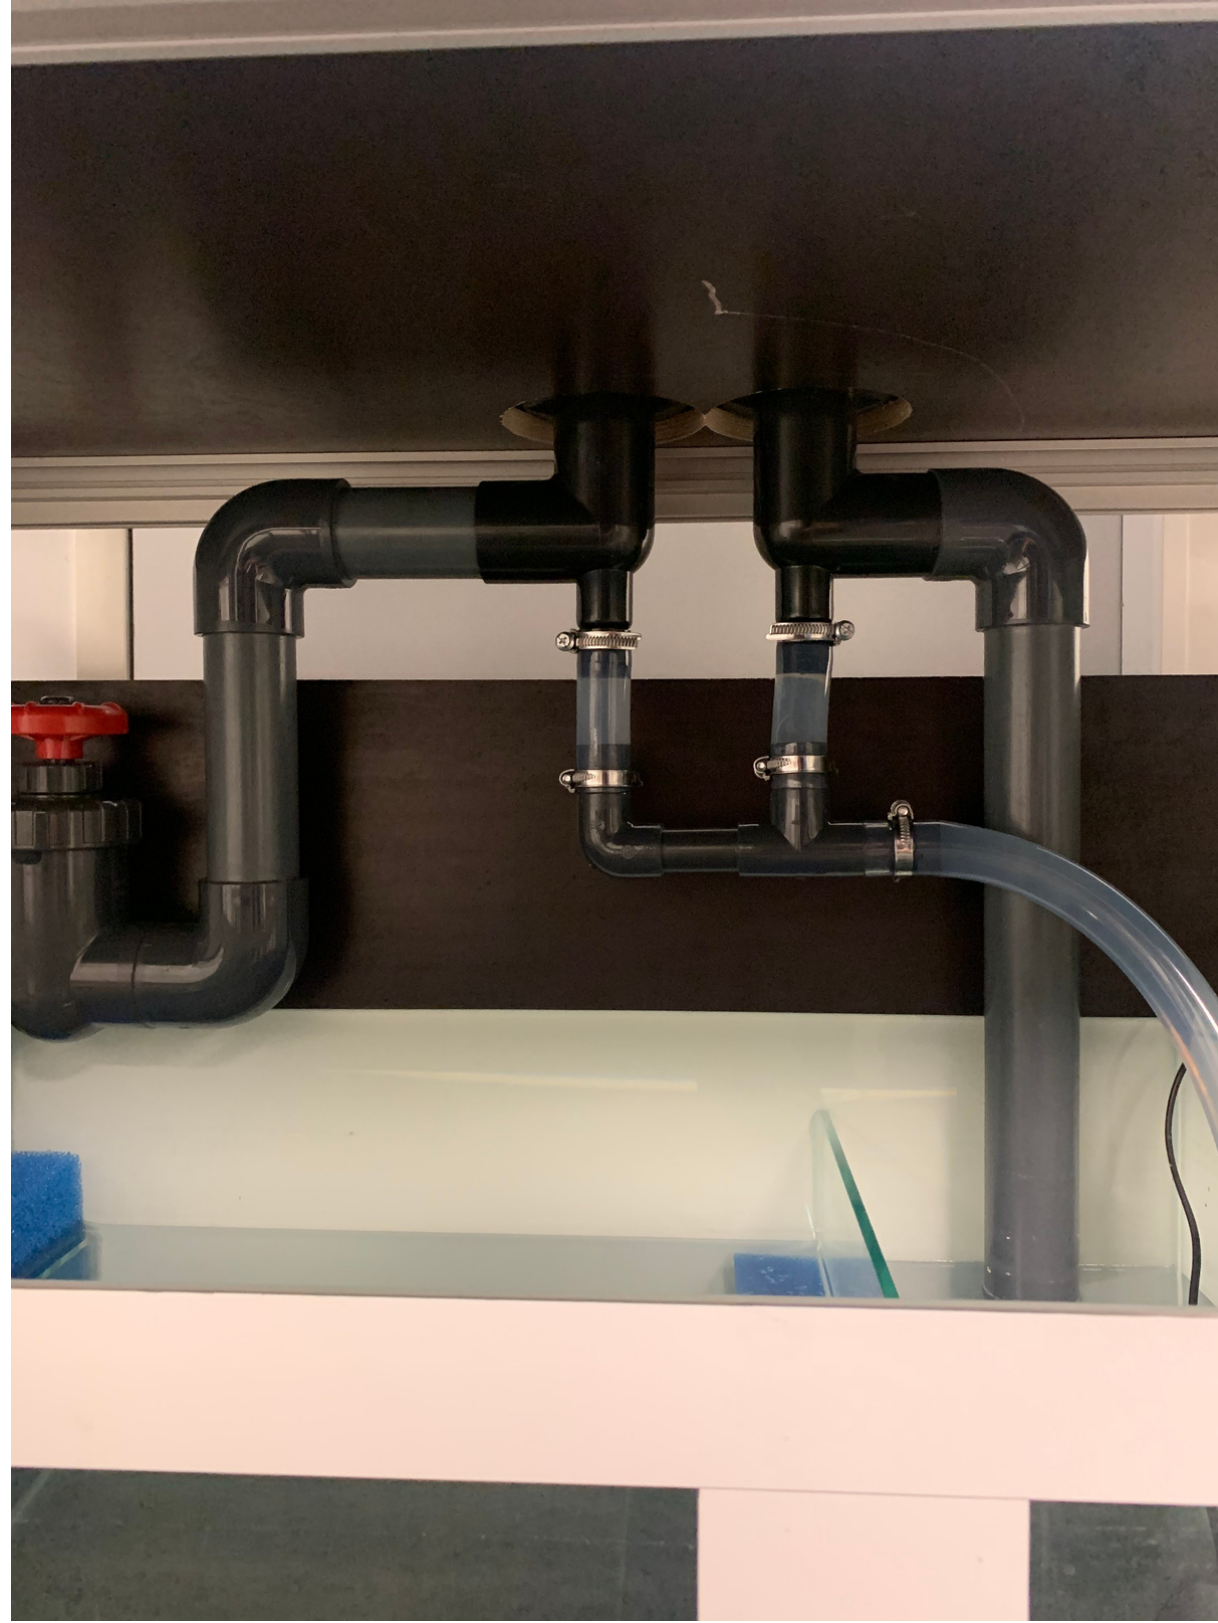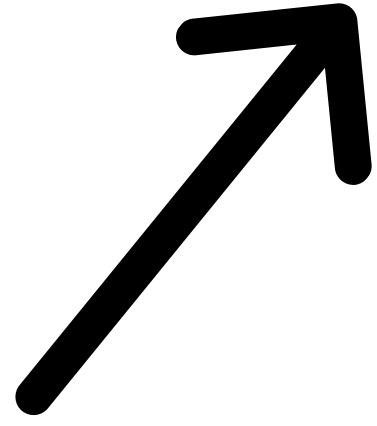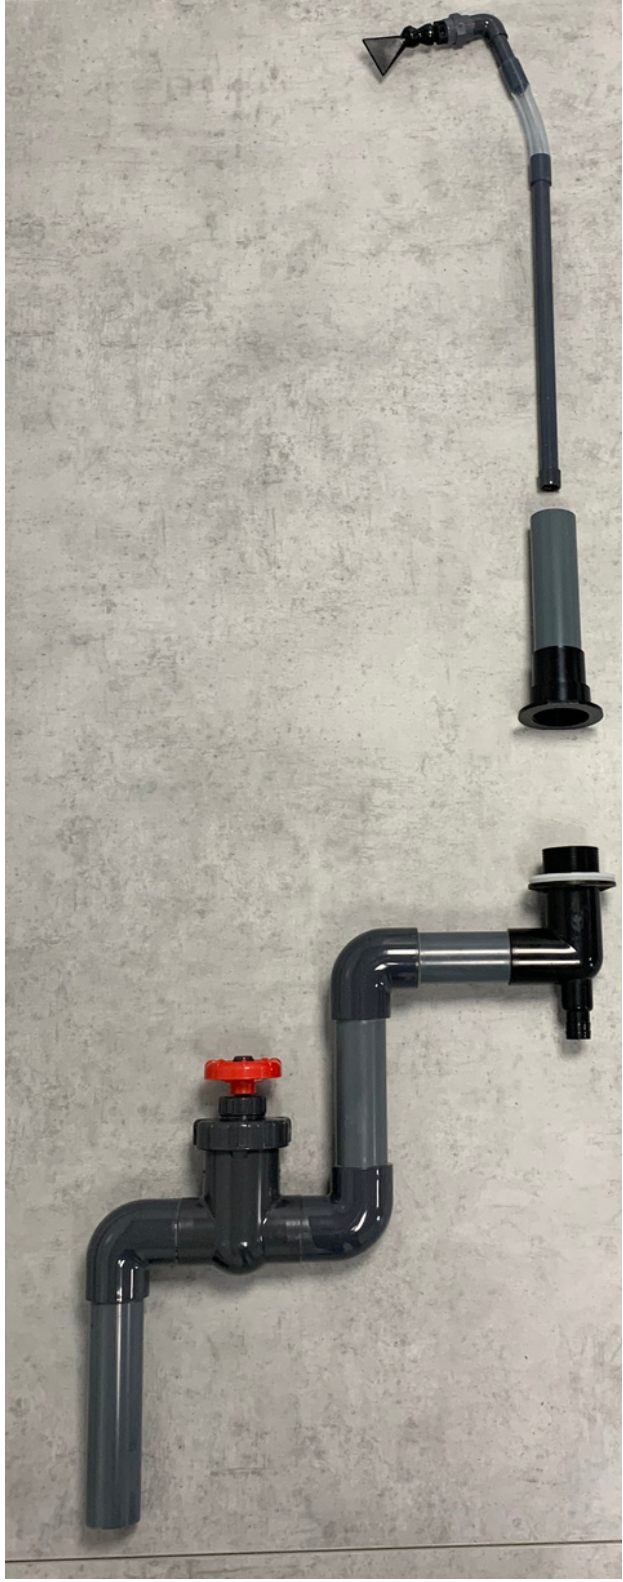

# Connecting the outlets



Fit the outlet pipe and screw the outlet in through the hole. **Note:** do not overtighten to prevent glass breakage