


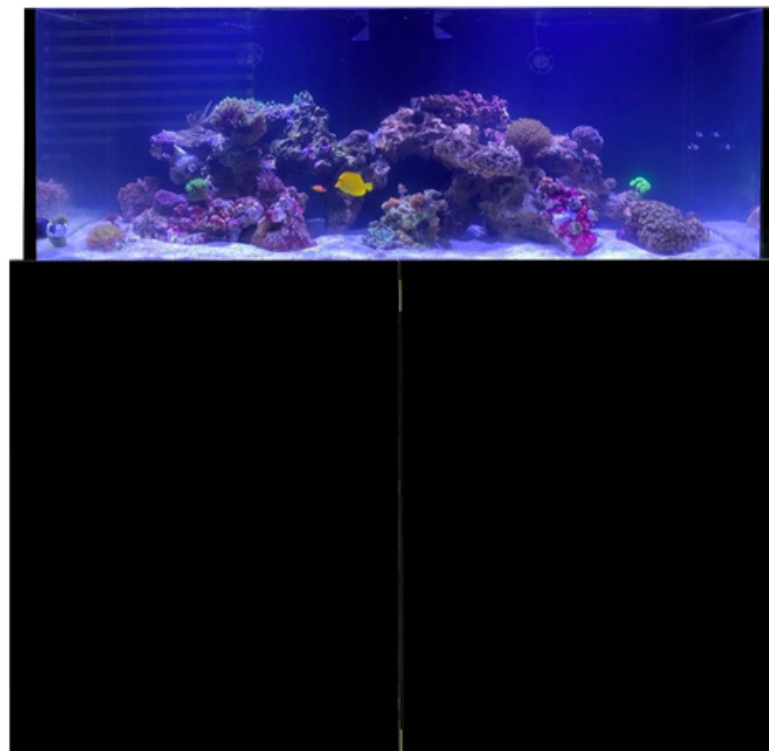

AQUAJA®

DIAMOND LINE


**INSTALLATION MANUAL
PIPEWORK MODEL 275 & 400**



Overview piping





You will receive the piping pre-glued in 2 parts.
On the left the main drain with an integrated return pipe. The emergency drain is on the right. In the supplied bag you will find the outlet and a hose clamp to attach the hose for the pump.



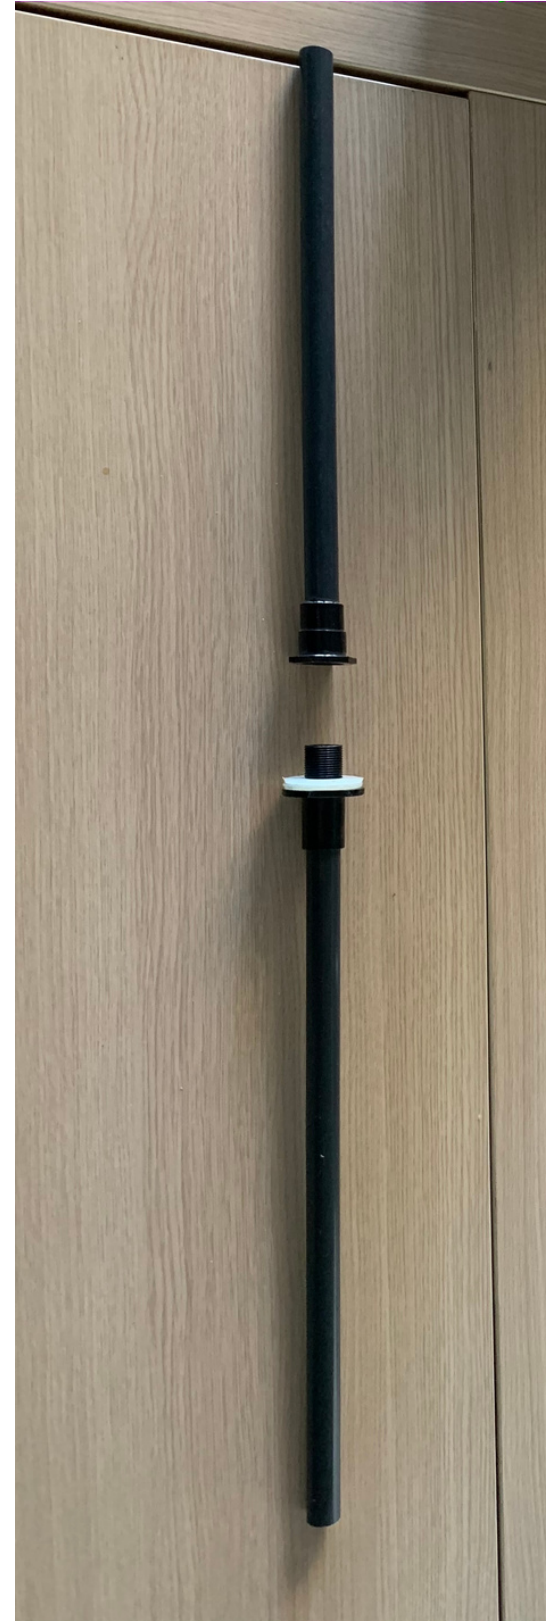

Connecting the drains

To start connecting, unscrew both the main drain and the emergency drain. The main drain must be attached to the pre-drilled hole on the left side of the overflow. The emergency drain is attached to the hole on the right side of the overflow. Note: do not overtighten the pipes to prevent glass breakage

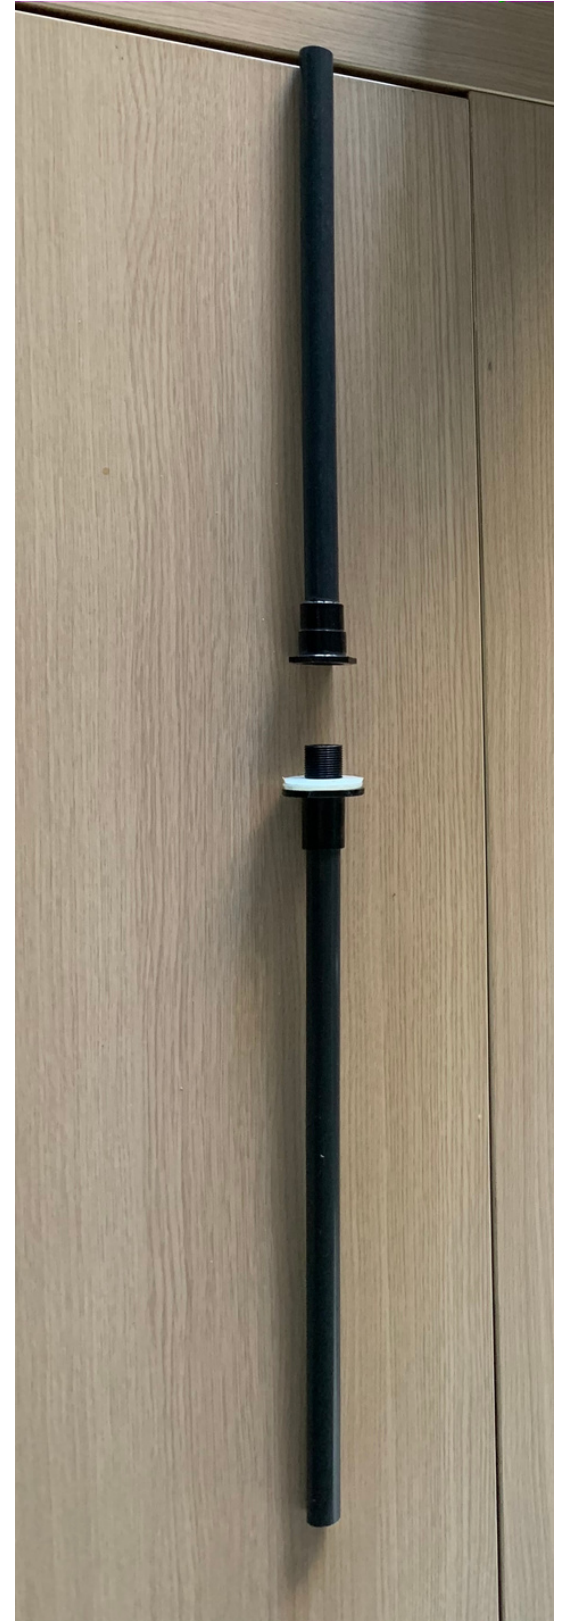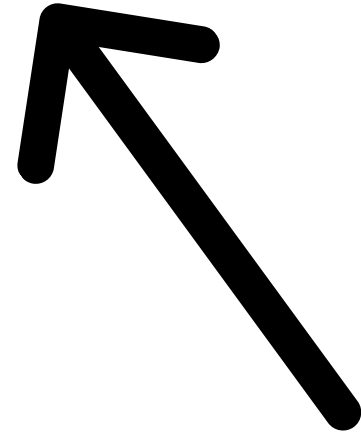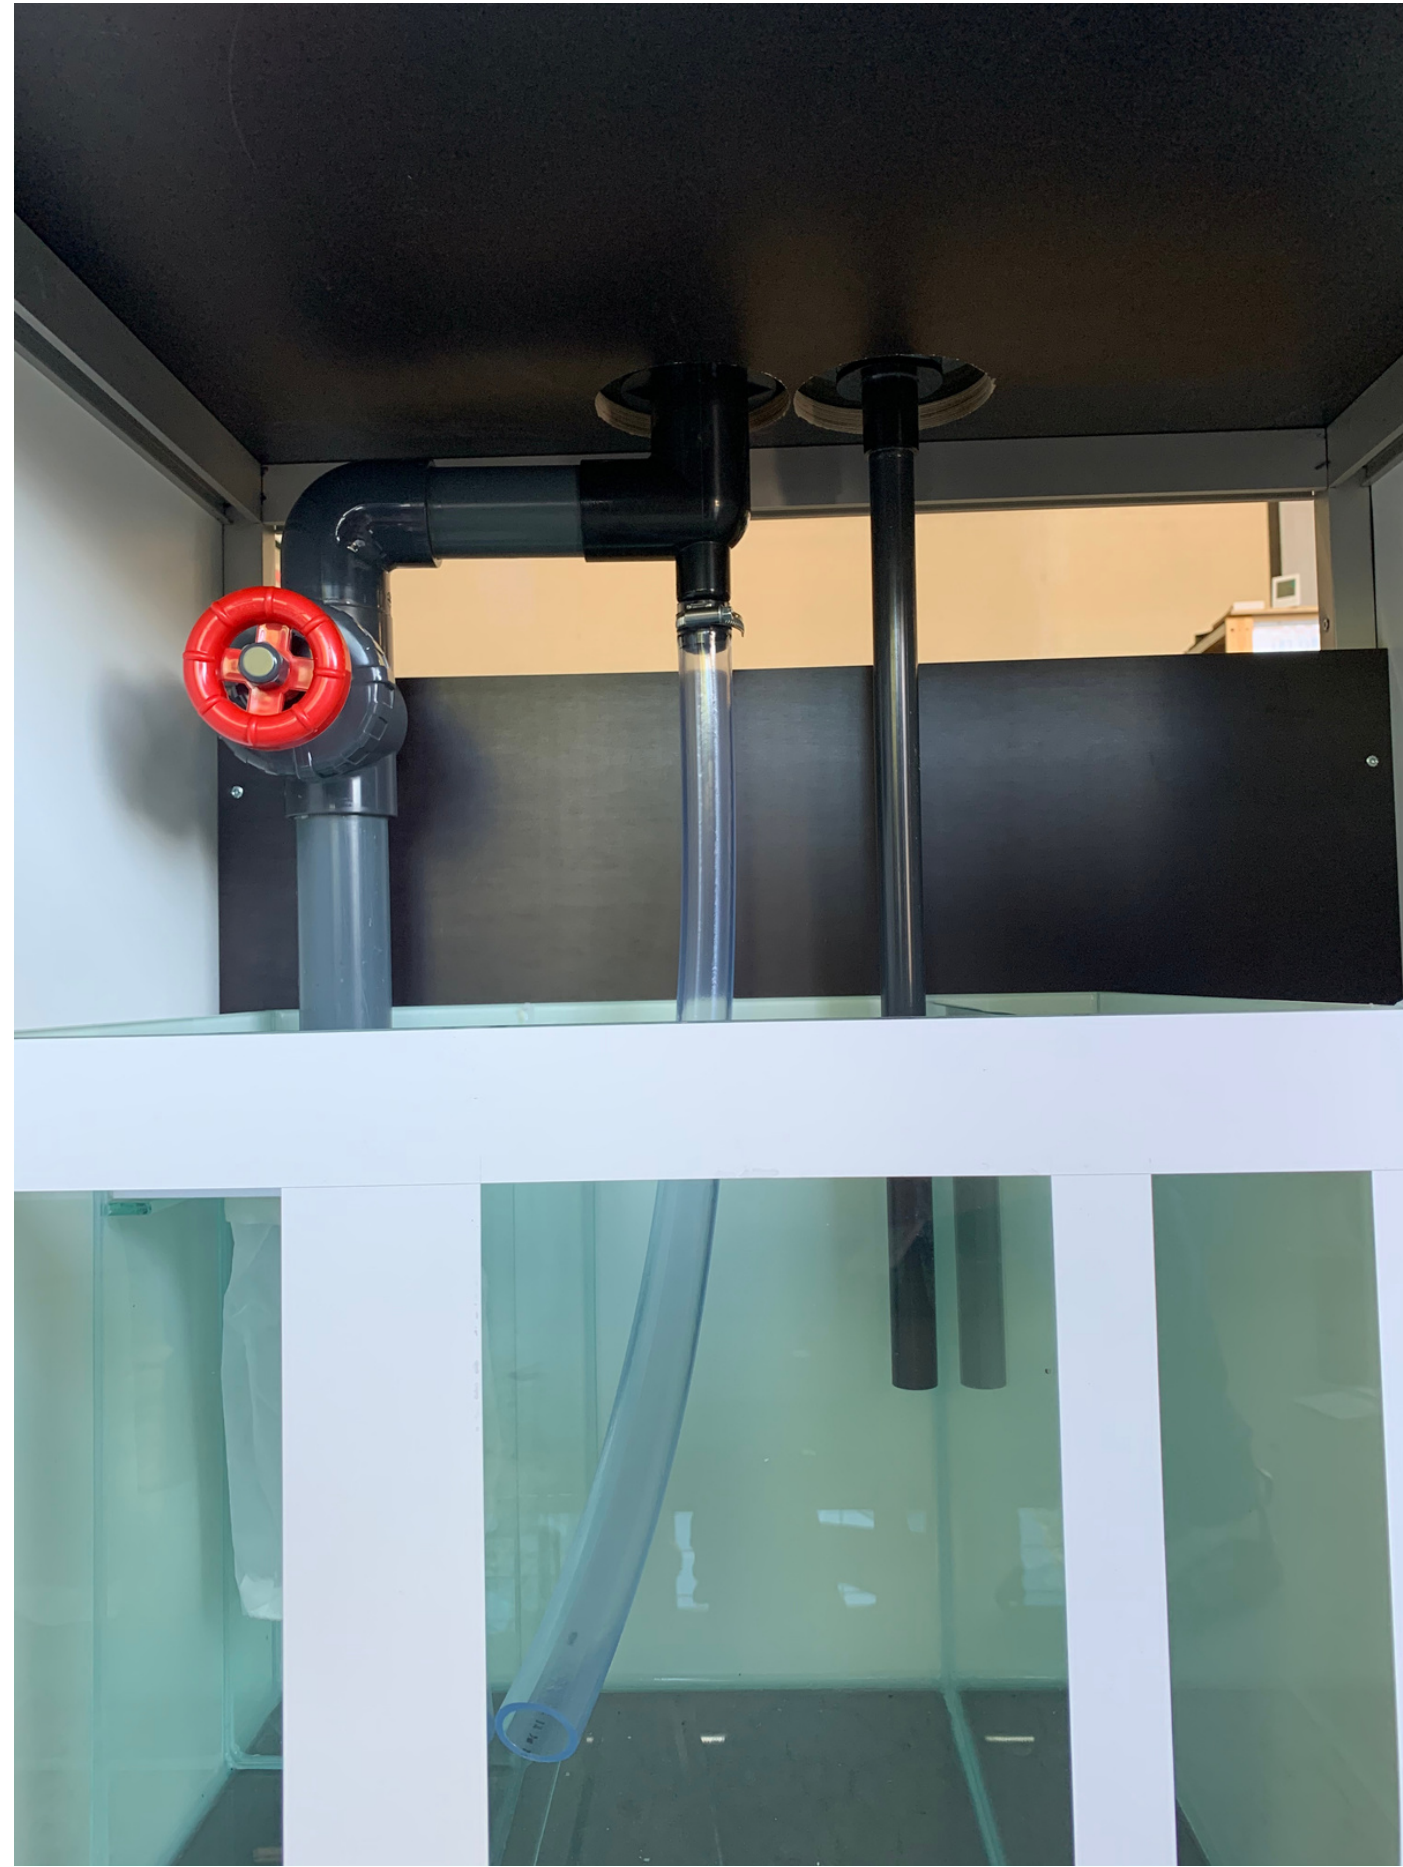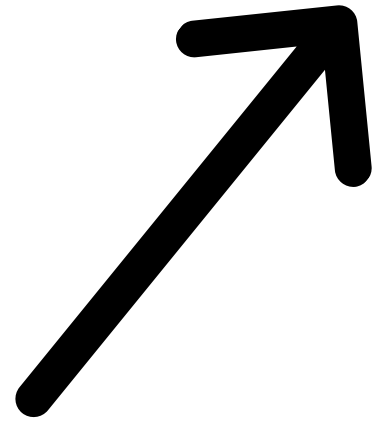

Connecting outlets



Fit the outlet pipe and screw the outlet in through the hole. **Note:** do not overtighten to prevent glass breakage